


1300⁺⁵⁰
Merjeno od nosilca
Measured from support


250^{±20}

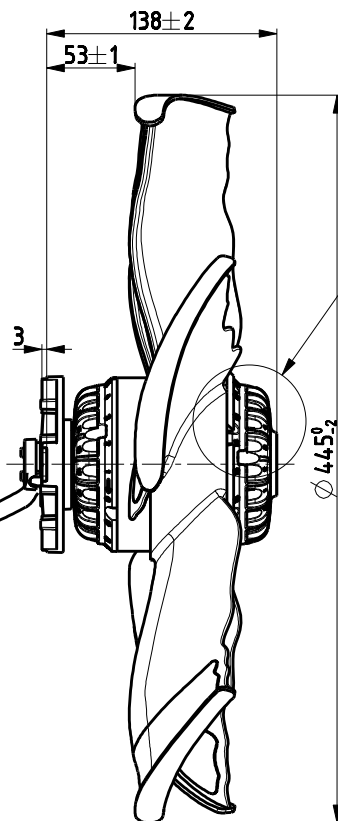



BLOWING
AIRFLOW DIRECTION
SMER ZRAKA

DETALJ A:


DETALJ A:
1:1

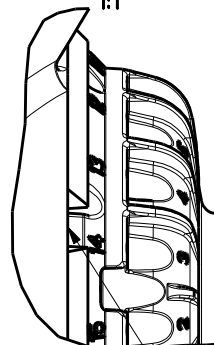

Rob rotorja in
rob elise ventilatorja
morata biti poravnana

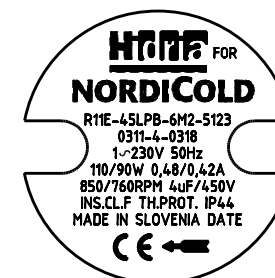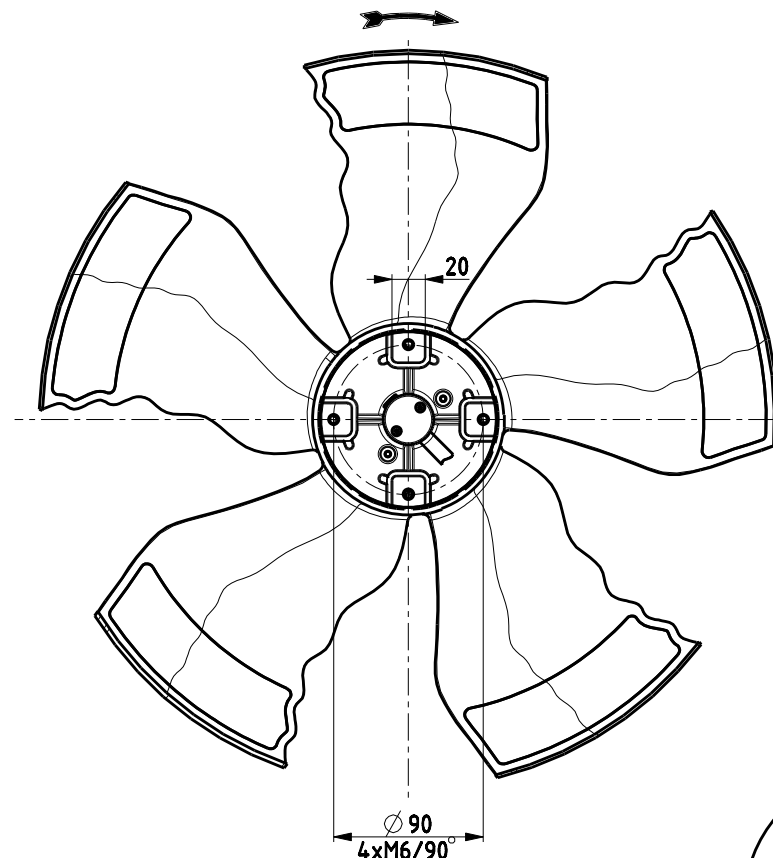

- Opomba:
- navodilo za kontrolo ventilatorja 0301-1-4672
 - checking instruction 0301-1-4672
 - v vsako škatlo priložiti priključno shemo 0301-1-0014
 - in each box must be enclosed connection diagram 0301-1-0014

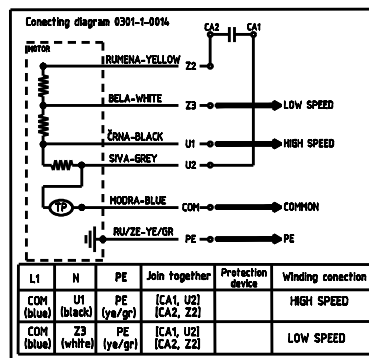

Hidria
Hidria Rotomatika

NETOLERANCE HERE
UNTOLERANCED DIM.
POVRŠINSKA OBR.
SURFACE TEXTURE

ISO 2768-M

33:100 / A3

MATERIAL

DATE
03-Nov-2008
03-Nov-2008

SIGNATURE
Uroš K.
Matjaž B.

NAME
NAZIVA
TITLE:

VENTILATOR
R11E-4SLPB-6M2-5123

CODE
0311-4-0318

0311-4-0318

VERZIJ:
REV:
LIST:
SHEET:
1
1