


Connecting diagram 0302-0-0023

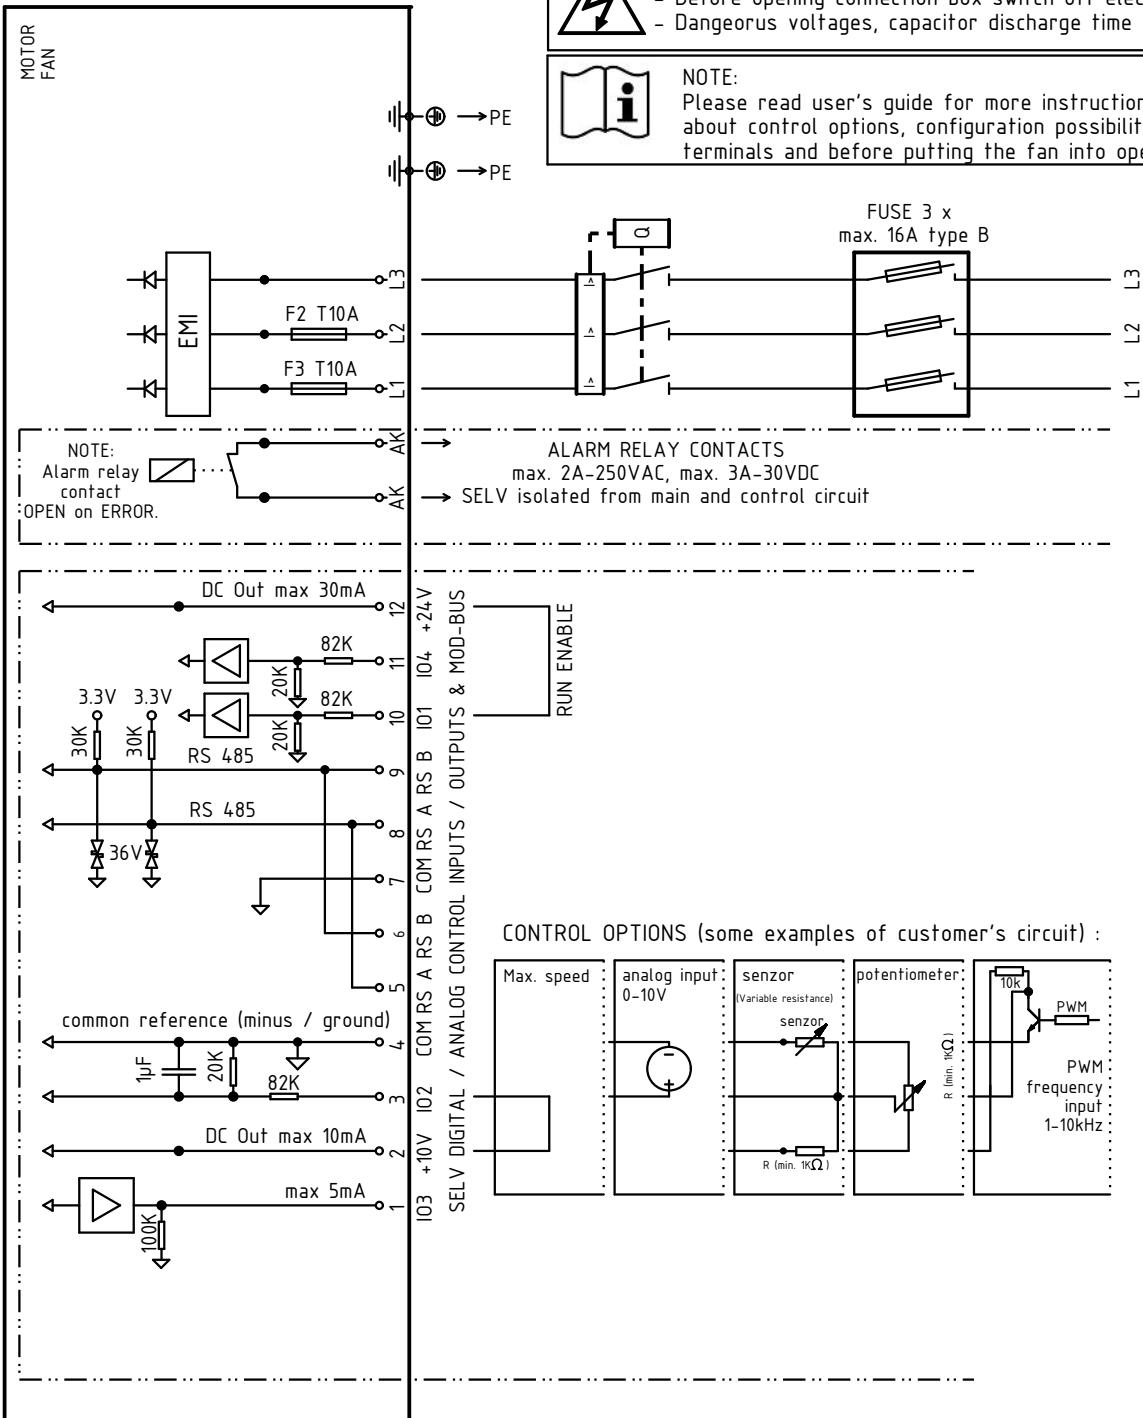

Terminal No.	Designation	Factory default HARDWARE function assigned	Factory default SOFTWARE function assigned
1	IO3	Analog output 0-10V, SELV	Actual speed
2	+10V	DC source +10V, SELV	
3	IO2	Analog input 0-10V/PWM, SELV	Speed reference
4	COM	Common reference (minus), SELV	
5	RSA	RS485 interface RSA, SELV	
6	RSB	RS485 interface RSB, SELV	
7	COM	Common reference (minus), SELV	
8	RSA	RS485 interface RSA, SELV	
9	RSB	RS485 interface RSB, SELV	
10	IO1	Digital input (active high), SELV	Run enable
11	IO4	Digital input (active high), SELV	
12	+24V	DC source +24V, SELV	

Terminal No.	Designation	Secondary available programmable functions:
1	IO3	<ul style="list-style-type: none"> - Digital input (active high), SELV - Digital input (active low), SELV - PWM input, SELV - Tacho output, SELV
2	+10V	
3	IO2	- Digital input (active high), SELV
4	GND	
5	RSA	
6	RSB	
7	GND	
8	RSA	
9	RSB	
10	IO1	<ul style="list-style-type: none"> - Digital input (active low), SELV - Analog input 0-10V/PWM, SELV
11	IO4	<ul style="list-style-type: none"> - Digital input (active low), SELV - Analog input 0-10V/PWM, SELV
12	+24V	